


Back connection STARK



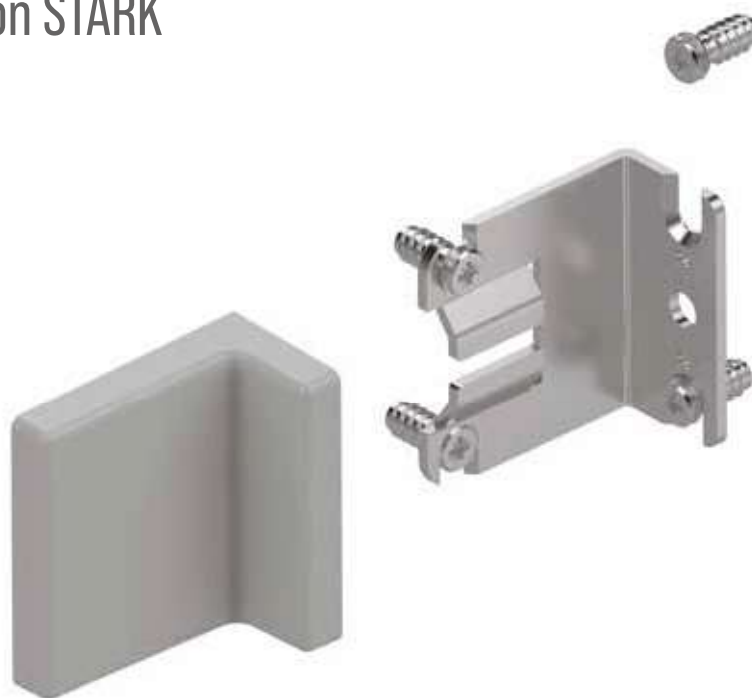


Squadretta "Stark" Bracket "Stark"

Materiale - Material > Ferro - Steel

Finitura - Finish > FZ

Art.	L	L1	i	i1	i2	S		
FM20	43,5	22	32	37	14,5	2	250	9,2

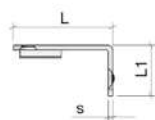
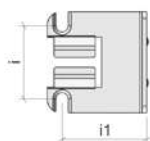


Coprisquadretta "Stark" Cover "Stark"

Materiale - Material > Plastica - Plastic

Finitura - Finish > PB - PMA - PNE - PGA

Art.	L	L1	L2		
CS01	46,5	24	48,5	2.000	11,7

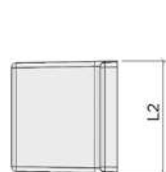


Vite euro per fermaschiene "Stark" Euro screw for Back connection "Stark"

Materiale - Material > Ferro - Steel

Finitura - Finish > FZ

Art.	Ø	M	L		
VS05	8	6euro	10,5	9.000	23,4



Schema di montaggio STARK

Assembly sequence STARK



Posizionare le squadrette ed avvitare le viti nelle apposite forature sui fianchi del mobile. Inserire ed avvitare la vite, come mostrato qui sopra, nelle apposite forature sulla schiena del mobile. Sollevare la schiena del mobile e allinearla con i fianchi. Inserire ed avvitare l'ultima vite nell'apposita foratura sulla schiena del mobile. Inserire le coprisquadrette.

Insert the bracket and tighten the screw in the appropriate holes on the sides of the cabinet. Insert and tighten the screw as shown in the appropriate holes on the back of the cabinet. Lift the back of the cabinet and align it with the sides. Insert and tighten the last screw in the appropriate hole on the back of the cabinet. Insert the cover cap.

